




WHAT'S INCLUDED:

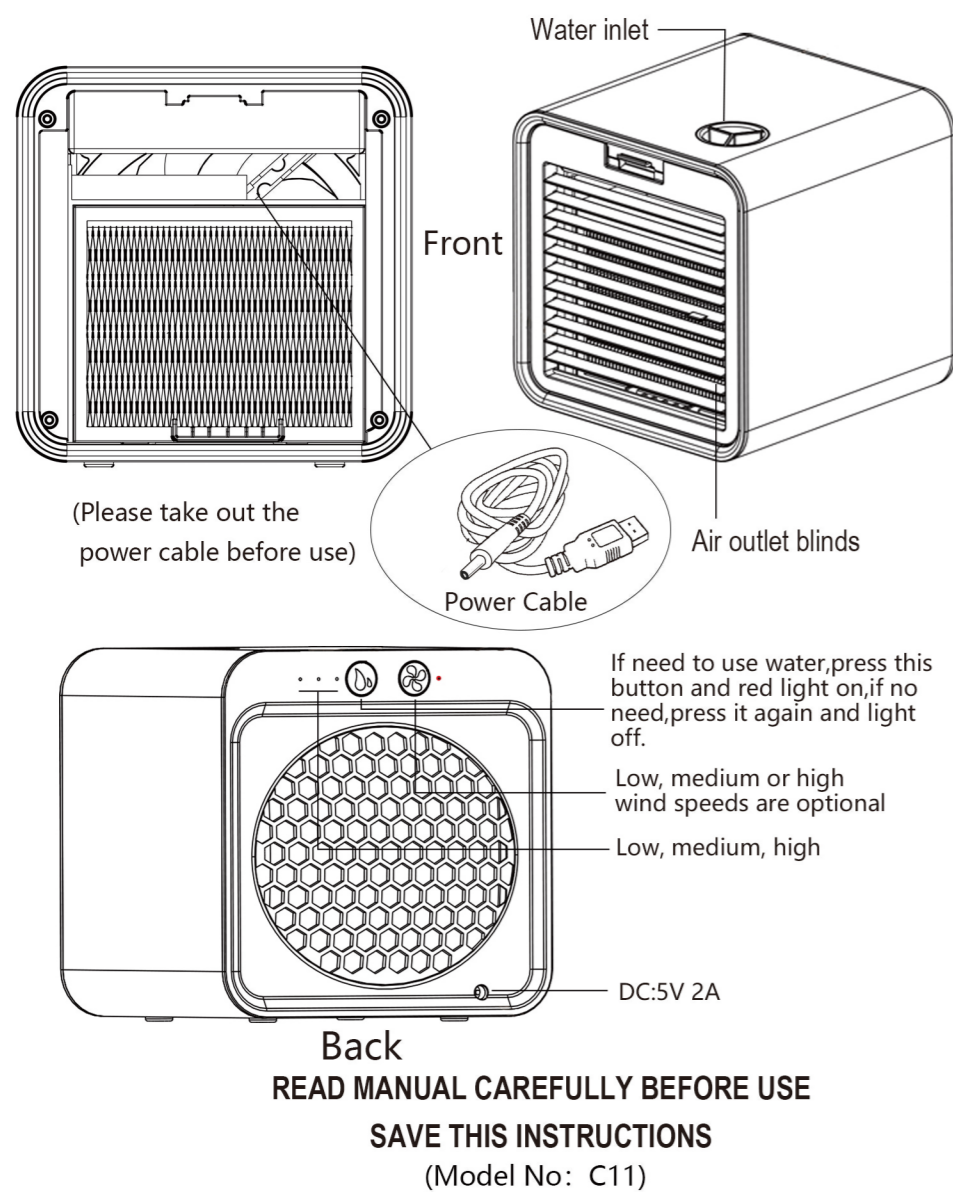

TIPS:

- Place C11 on a raised surface such as a table, desk or counter top. This is the best way to cool your personal area faster.
- Let filter absorb water for at least 3 minutes after filling tank and before use .Doing so will get you the coolest air quicker.
- Try to stay within a few feet of C11.You'll feel the most benefit when sitting directly in front.
- C11 will run for approximately 6 hours on a single fill on Low fan speed. Even if water tank is empty , filter is still damp and C11 is still cooling.

SETUP:

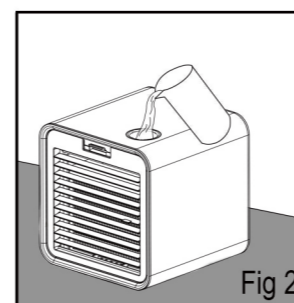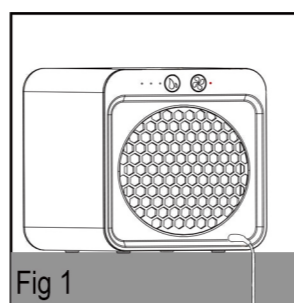

1. Place C11 on a flat surface.(See Fig 1)
2. Open the water tank cap and fill with water(See Fig 2). We recommend a pitcher or measuring cup.

NOTE: You can plug the USB end into a computer to power the device as well.

USAGE:

1. PRE-SOAK FILTER:
Place your filter under running cold water until wet.
TIP:For even more cooling,place a wet filter in the freezer until frozen.(See Fig 3)
2. Plug in the power cable(See Fig 1)
3. Press power button to power on C11(See Fig 4)
4. Set the Fan speed by pressing button.You can choose from Low,Medium and High Mode. The indicator lights next to the button show you which speed C11 is currently running .(See Fig 5)
5. If you use the water in the tank,please press the button ,if you don't need water,turn this off.
6. When you're done,press button to turn off the machine.and unplug the power cable.(See Fig 6)

NOTE:We recommend running C11 on HIGH mode for at least 5 minutes before powering off to allow for drying.

MAINTENANCE:





We recommend cleaning the water tank and inside of the unit once weekly. Use only a non-abrasive cloth and mild dish soap when needed. For best continued results we recommend changing the filter every 6 months. To purchase filters ,please contact your local seller.

CHANGING THE FILTER:

The Water Filter should be changed every 6 months, or when you feel the machine is not functioning as it should be.

To purchase a replacement filter Please contact with your local seller.

1. Unplug C11 from the wall
2. Gently press in release tab on top of front grill and pull grill down and away from unit. Place aside.(See Fig 7)
3. Grab onto filter and carefully slide out of unit completely(See Fig 8)
4. Place new filter in the machine as shown by markings on filter(See Fig 9)
5. Insert top tab of front grill into slot, and press releas back into place.(See Fig 10)

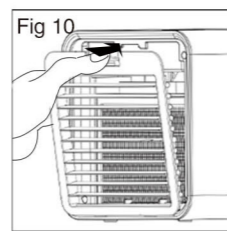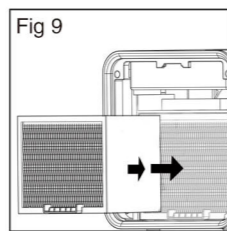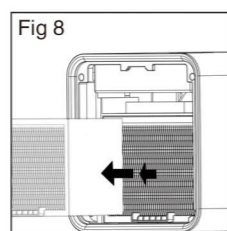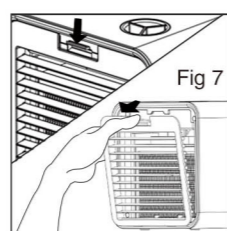

WARNINGS:

- Do not carry C11 when filled with water.Some water may remain in unit even if tank is empty.
- Use only clean water. if needed, use distilled water.
- Please read and follow regular maintenance as recommended in "Maintenance" section of this guide.
- C11 works best in non-polluted areas. Large dust/dirt particles may reduce lifetime of unit.
- We recommend use only in dry locations. If using in a moist area or environment, take care not to get water on external areas of the product.
- If a leak or spill occurs on the surface of device, unplug C11 and let it dry for 24 hours.Then use as normal.
- Do not place in direct sunlight for extended periods of time.
- Before not using C11 for extended periods of time,empty the water tank, turn unit on and set to highest fan speed for at least 4hours. This will dry out then filter and inside of your unit.
- Only use the original power adapter and cord supplied in package.
- Do not touch the power supply or power cord with wet hands.
- Unplug C11 when cleaning , removing /replacing filter ,or moving the device.
- Do not place C11 near a heater or any electrical equipment.
- Do not place the device in passageways or high traffic areas where there is apossibility of tripping or knocking it over.
- Do not allow any foreign objects inside C11.
- Do not place items on top C11.
- Do not block the front and back grills of the device.
- Do not Submerge the C11 under water or other liquids.
- Do not place C11 near open flames or fire sources.

WARNINGS (CONT):

- People with limited physical, visual or mental abilities or lacking proper experience and/or knowledge should never use the device without supervision of those responsible for their safety or those capable of assistance in using the device.
- The device can be switched off completely only when disconnected from the power supply.
- The manufacture does not baer an responsibility for any damage from failure to comply with this product guide.
- A replaceable water filter is designed specifically for this product. If your cartridge has been broken or damaged you can purchase a replacement.

NOTES:

FOR HOUSEHOLD USE ONLY

Model Number: C11
Max Power:10W
DC 5V , 2.0A

MADE IN CHINA